


Here are all of the materials for the Bat House

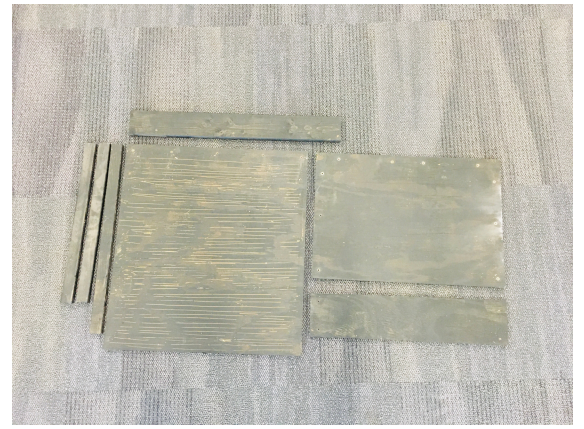

1. Put the bigger board down first. Set it where you are most comfortable to use caulking and a drill. Lay a strip of caulking and place the long, thin piece on the top edge and push down.



2. Lay a another strip of caulking down the outside edges. Lay the smallest pieces over the caulk and push down. Lay down another beat of caulking.



3. Once you are done putting in the caulking, line up the pre-drilled holes and attach the pieces with screws in those holes. We recommend you use a drill. It will be easier to use than a screwdriver. You need to make sure that you have a small space for air to get in between the 2 top boards.



4. Now carefully flip over the entire bat house.



5. Line up the holes on the back side and attach the back with screws in those holes



6. Line up the top piece and attach it with screws.

Now you have your bat house!